


SOFTWARE FOR LASERLABEL

Download File from the Willy website


1. Connect to the Willy website at the address: www.willyit.com. Go to the **Download Area** and find the **Software for Laserlabel** section




2. Select the file to download and make a click on the link **Download**.

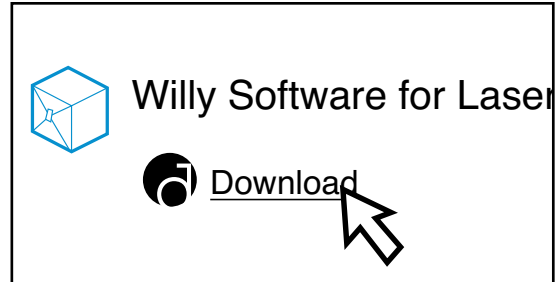

Decompress the downloaded file, by using a software for the file archiving, like Winzip (downloadable freeware from internet).

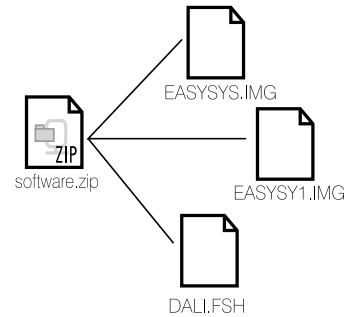

Copy the three decompressed files in a empty and Dos formatted floppy disk.


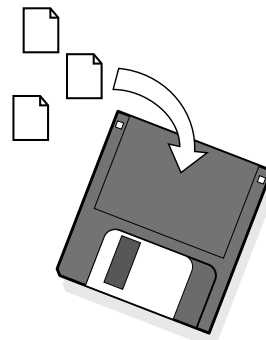


CNT CARD ADJUSTMENT






ATTENTION!



Switch-off the machine before doing these operations.

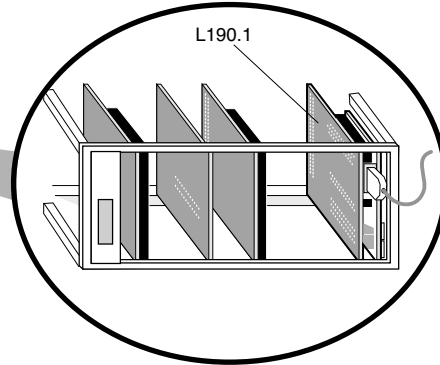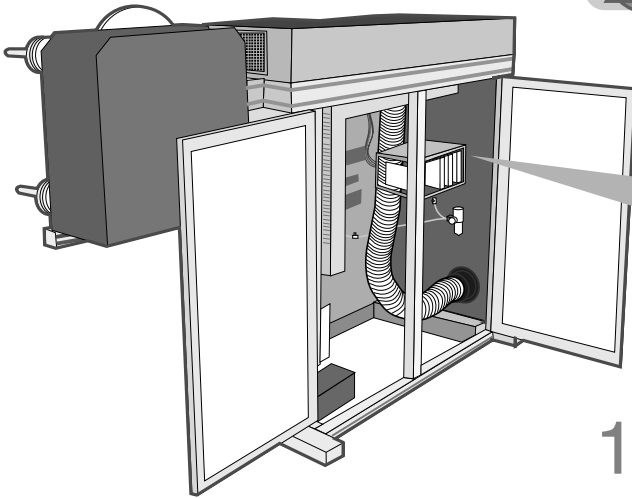


- 1 Open the rear panel of the machine to reach the cards rack.

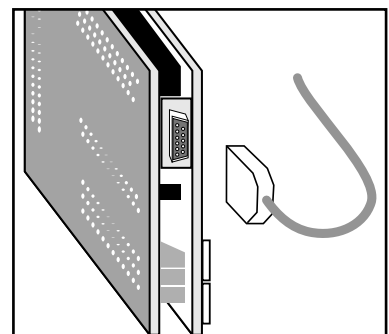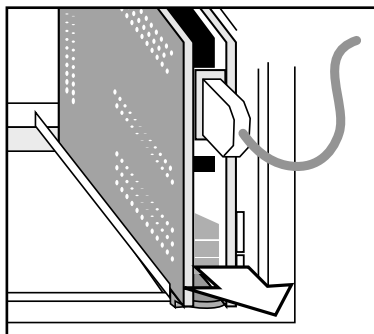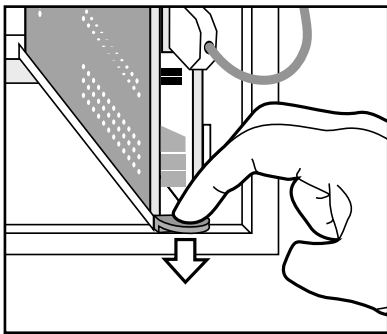


- 2 Push down the red block at the bottom of the card to unlock it from the card rack. Remove the card from the rack. Remove also the connector shown in the diagram in order to operate more easily.

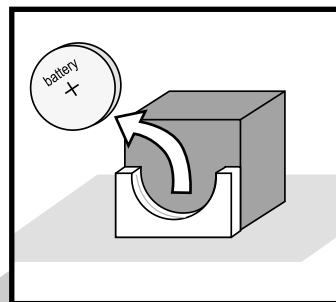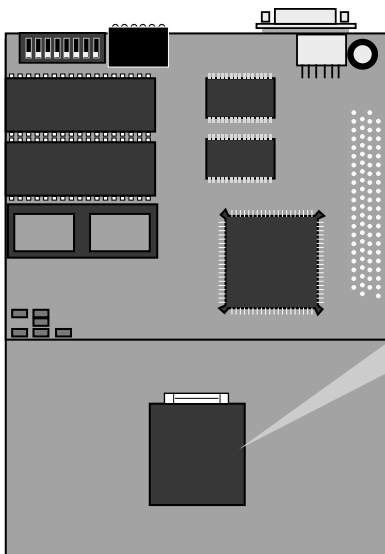

- 3 Localise the memory battery on the card and remove it. Wait 15-20 minutes before reinserting the card into the rack.

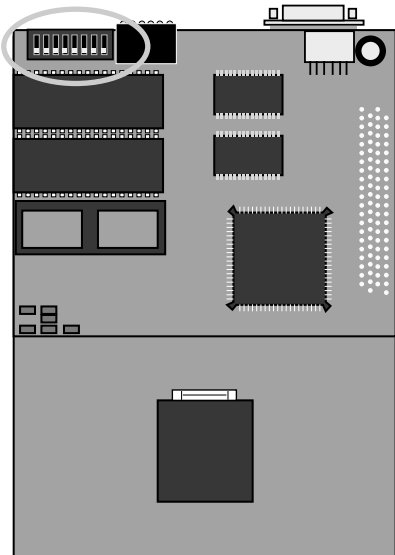



4 Localise the “dip-switches” at the edge of the card. Place the switches as shown in the diagrams below, referring to the machine model.
ATTENTION: Do not touch the switches 1-2-3.

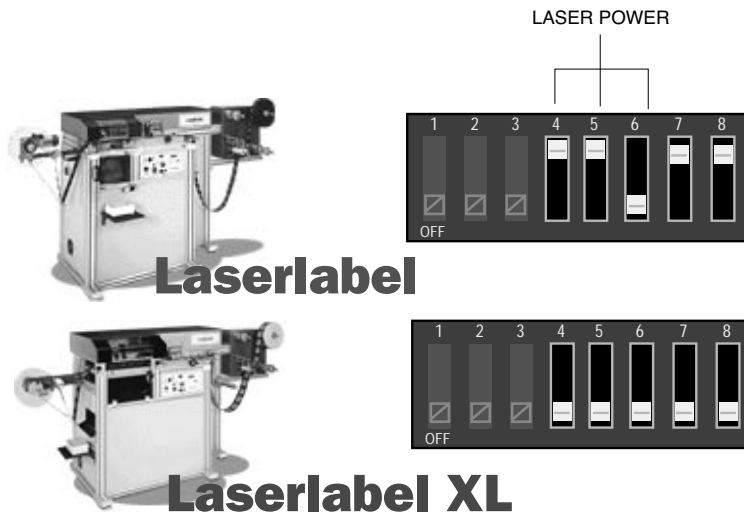


The tabe for the selection of the laser power uses the dip-switches 4, 5 and 6 as follows:

4	5	6	
OFF	ON	OFF	Table 1 = Lower Power
ON	ON	OFF	Table 2
OFF	OFF	ON	Table 3 RECOMMENDED
ON	OFF	ON	Table 4
OFF	ON	ON	Table 5
ON	ON	ON	Table 6 = Higher Power


5 Plug the connector and insert the card into the rack.

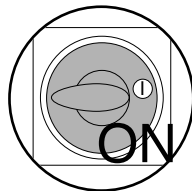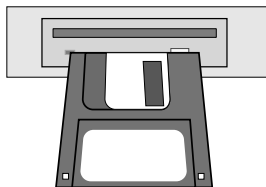

6 Insert the floppy disk with the **software for laserlabel** into the disk-drive of the machine. Turn on the main switch.

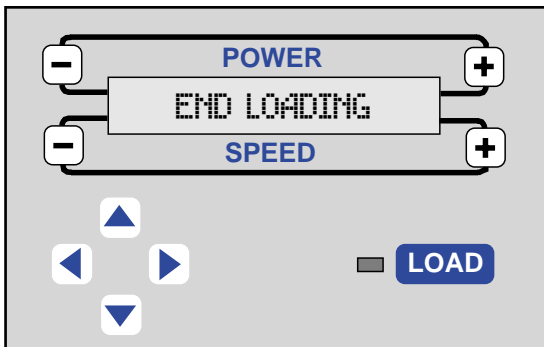

7 The software installation will start automatically when the machine is switched on. Switch OFF the machine when the message “**END LOADING**” appears on the display. Then eject the floppy from the drive.

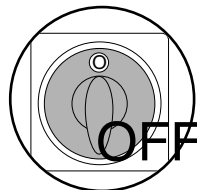

8 Switch on the machine again. The message on the display: “**NO PROGRAM**” will appear. Insert a floppy with a drawing into the drive. Push the **LOAD** button to load the profile into the machine.